

PARTY PACK SET UP INSTRUCTIONS

Our home party pack systems are designed to give high quality sound reproduction in all applications. To get the best results from them do not turn the mixer controls full on, as this will distort the output through the speaker system. This will not sound good and will probably cause damage to the speaker drivers.

- 1] Place all the pieces of equipment (Mixer amplifier & two speaker cabinets) where you wish to use them.
- 2] Put the mains plug from the Mixer Amplifier into the plug board provided.
- 3] Connect the amplifier to the speakers using the two jack/jack speaker cables supplied. Using one of the jack/jack cables plug one end into the speaker output socket LS1 of the mixer amplifier, and the other end into either sockets on the rear of the speaker cabinet. Do exactly the same with the other speaker cable using channel 2 speaker output LS2 of the amplifier and go to either socket on the other speaker cabinet.
- 4] Turn on the Mixer amplifier using the on/off switch on the rear of the unit. Once this is done turn the MASTER volume control on the amplifier half way, you will find the master volume on the bottom right at the front of the mixer amplifier,
- 5] Plug the Ipod/Laptop cable in to CH2 or CH4 using the twin phono input sockets.

If you require any further assistance or if you have any questions please contact Steve or Matt in the office on 020-8449-6711

HOME

PARTY

PACK

MANUAL