

TWIN CD PACKAGE SET UP INSTRUCTIONS (700/1000 WATT SYSTEMS)
SUBS & FULL RANGE

Our twin CD sound packages are designed to give high quality sound reproduction in all applications. To get the best results from them do not turn the mixer controls full on, as this will distort the output through the speaker system. This will not sound good and will probably cause damage to the speaker drivers.

1] Unpack the CD mixer by removing the flight case lid, and front of case by unlocking the catches. Do the same with the amplifier by unlocking the catches at the front and rear of the case.

2] Place all the pieces of equipment (CD/mixer, amplifier & four speaker cabinets & stands) where you wish to use them. Spread the legs of the tripod into a sturdy position so as the speaker will not topple over easily, even if knocked into, and lock by tightening the lower rotary screw wheel. Adjust the telescopic stand to a suitable height and lock with the pin supplied through the stand using the holes provided and lock by tightening the higher rotary screw wheel. Both wheels should not be too tight. Place the speakers on the stands(if required) by slotting the hole in the base of the speakers into the top of the stand.

3] Put the two mains plugs from the CD & mixer into the plug board provided. Do the same with the mains plug from the amplifier.

4] Connect the mixer to the amplifier using the two xlr/xlr audio cables supplied. This is done by connecting the two balanced xlr output sockets from the mixer to the inputs of the amplifier via the two balanced xlr input sockets on the rear of the amplifier.

5] Connect the amplifier to the speakers using the four speakon/speakon speaker cables supplied. Using one of the speakon/speakon cables, plug one end into the speaker output socket of channel 1 in the amplifier, and the other end into either socket on the rear of the first RWS bass speaker cabinet. Twist all the speakon plugs to the right once they are pushed into the socket in order to lock them in. They will not work otherwise, and you will not get any sound through the speaker system. Link this speaker cabinet to the RW3 full range speaker cabinet using another speakon/speakon cable. Do exactly the same with another speaker cable using channel 2 speaker output of the amplifier, and go to either socket on the next RWS bass speaker cabinet, and then link it with the other RW3 full range speaker cabinet using the final speakon/speakon cable. You should now have one RWS sub & one RW3 full range speaker linked to each channel of the amplifier.

6] Turn on the CD player, mixer & amplifier using the on/off switches on each piece of equipment. Once this is done turn the volume controls on the amplifier to full, ensuring that the master on the mixer is fully off.

7] You are now ready to use your hired sound system. Have a great time.....